

## Loading User Interface Components

The “ENERGY EXECUTIVE III”® user interface components are formed into a desktop toolbar by the Energy Executive “Manager” (EnexMngr.EXE) application. The tool bar appears like this:



Toolbar Item                    1            2            3            4            5

The toolbar items (as numbered above) represent:

1. The “Parameter Editor”: This component handles the configuration of operating parameters such as schedules, occupied and unoccupied set points, global temperature set points, etc. This component also provides a manual override capability.
2. The “System Configuration Editor”: This component handles system configuration including adding points, deleting points, configuration of points, configuring hardware addresses, assigning points to hardware addresses, etc.
3. The “Classic Interface”: This component displays system status in a format very similar to the “ENERGY EXECUTIVE II” ® for DOS program. Requiring no configuration, this component will display the status of points as soon as they are added to the system via the System Configuration Editor.
4. The “Graphical Interface”: This component allows the user to design detailed and animated graphical displays to represent the facility and control system. Each graphical window may include point statuses, analog values, meter readings, hotspot links to other windows, animation and flood points tied to point statuses.
5. The “History Reviewer”: This component allows the user to review historical data being logged by the Manager. Available data includes analog values and meter readings logged every 15 minutes and change of state information. This data may be viewed individually or in any combination and may cover a period from a few minutes to a few weeks. Data may be viewed in either a tabular or graphical format.

To load any one of these components simply click on the appropriate Icon!